



Content Revisions

September 2020 printed version

The newest edition of the **EROAD ELD User Manual** is now available electronically online at:

- <https://help.eroad.com/us/us-setupstart/>, or
- <https://help.eroad.com/us/us-eld/us-informationpacket/>

This edition includes the following revisions and new additions:

Revisions	Explanation	Page	Section(s)
Driving setup	Note added for login scrolling feature, not available for organizations with more than 2000 drivers	3	2.1
Changing your duty status	Added Change Duty Status screenshot	6	2.4
Using quick remarks	Note added for using quick remarks, i.e. required notes	8	2.6
HOS summary	Revised wording for HOS Screen Summary tab and also for the drive, shift and cycle descriptions	9	2.8
Rolling view	Revised wording for Rolling view tab	10	2.8, 2.9
Exemptions	Revised wording for 30-minute break, 16-hour, Short haul, Adverse condition and Oilfield exemptions and exceptions to be current with the most updated HOS changes	11	2.11
Exemptions	Updated Short haul icon from 100 Air-mile Short haul to SH	11	2.11
Exemptions	Added Short Haul Exemption Air Mile warning screenshot	12	2.11
Adding or dropping trailers	Added note on performing Pre and Post and Post trip inspections with direction to DVIR Addendum	12	2.12
Persistent shipping document	Added review of the Persistent Shipping Document feature, including 2 screenshots and step-by-step instructions	16	2.13.3
Logging out	Added information to the note about waiting 10 seconds for logs to sync before logging out when using a kill switch	31	3.9