

Enabling Short Haul Exemptions in Depot



eroad.com



Learning Objectives



In this training session, you will:

- Enable exemptions in Depot

Enabling Exemptions in Depot



Exemptions and exceptions must be enabled in Depot so that the driver can access them on the in-vehicle device.

Back office staff must perform the following steps to enable an exemption for each driver.

1. Click the **Driver** menu.
2. Click the applicable driver's name to access the driver's profile.


The screenshot shows the Depot interface. At the top, there is a red navigation bar with the E logo and several menu items: ACTIVITY, TAX, SERVICE, INSPECT, DRIVER, and REPORTS. The DRIVER menu item is highlighted with a red box and a red circle containing the number 1, with an arrow pointing to it. Below the navigation bar is a sidebar with two main sections: Drivers (with a person icon) and Unidentified Trips (with a car icon). The main content area is titled 'Drivers' and contains a table with columns for Name, Alias, and Driver ID. The first row of the table is highlighted in light blue and is enclosed in a red box, with a red circle containing the number 2 and an arrow pointing to it. The table data is as follows:

<input type="checkbox"/>	↑ Name	Alias	Driver ID
<input type="checkbox"/>	456456 456456	4.456456	456456

Enabling Exemptions in Depot (continued)



3. Click the right side of an exemption toggle key to enable the exemption for the driver.
Note: Click the left side of a toggle key to disable the exemption.
4. Click the **Update** button to save the change in the driver's profile. The exemption is active on the in-vehicle device until it is disabled in Depot.

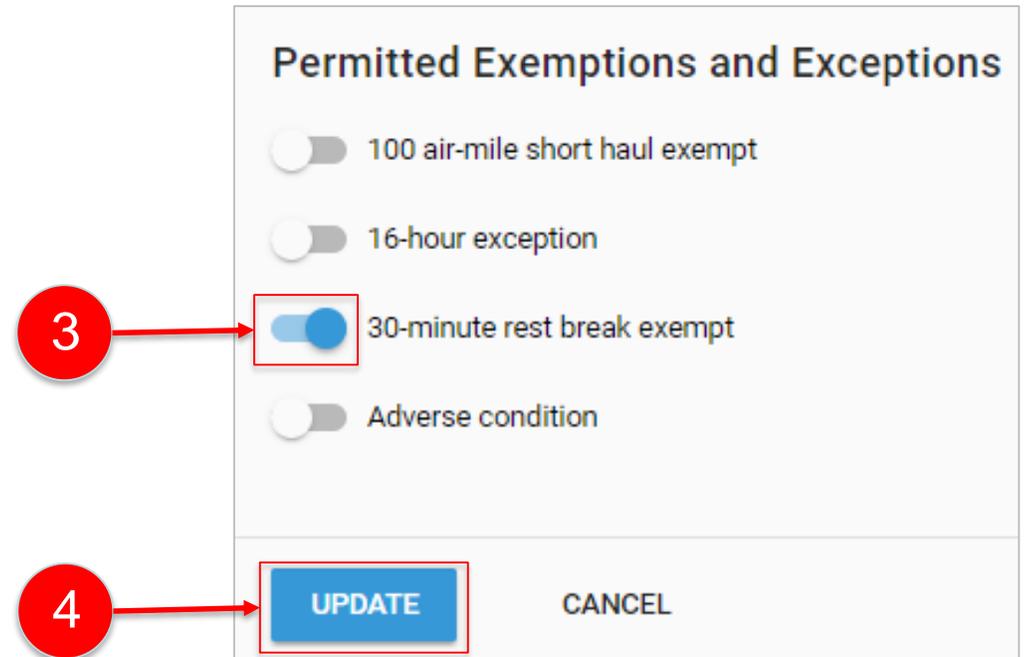

Exemptions Icons, Rule Set Interaction, and HOS Counters



The following table explains each exemption icon shown on the in-vehicle device and describes the interaction between rule sets while an exemption is applied. Both icons display on the Home screen if two exemptions are applied at the same time.

Icon	Description	Interaction Between Rule Sets
	30-minute rest break exempt	HOS counters display 11-hr driving limit, 14-hr driving window, and 60/70-hr (week) limit; driver is not prompted to take a 30-minute break after 8 hours of on-duty time
	16-hour exception	Applied when the driver operates under Interstate or 30-minute rest break exempt rule sets; extends the 14-hr driving window to 16 hours; automatically removed at the end of the day
	100 air-mile short haul exemption	HOS counters display 11-hr driving limit, 12-hr driving window, and 60/70-hr (week) limit; driver is not prompted to take a 30-minute break after eight hours of on-duty time
	Adverse condition	Applied when a driver operates under Interstate rule set and extends the driving limit by 2 hours; HOS counters display 13-hr driving limit, 14-hr driving window, and 60/70-hr (week) limit

Learning Summary



In this EROAD ELD training session, you :

- Enabled exemptions in Depot

THANK YOU

