

Learning Objectives



In this training session, you will:


- View how the ELD interfaces with Depot
- View the Depot menu structure

EROAD ELD Architecture



EROAD ELD:

- Captures vehicle operational data via the ECM link
- Captures Global Positioning System (GPS) location data
- Transfers encrypted data via the cellular network to the Depot application
- EROAD Depot is accessed through a web browser for the carrier to set up and manage driver's ELD data

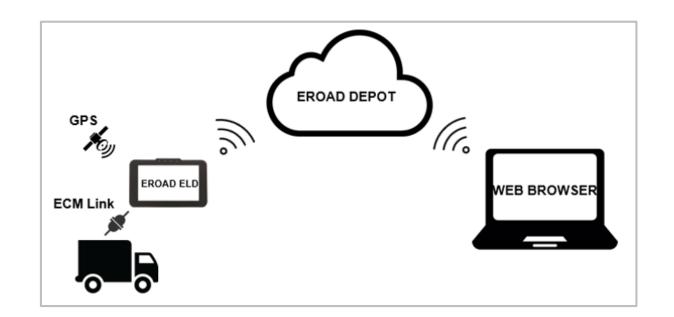


Data Capture and Depot Interface




EROAD ELD enables users to:

- Capture duty status
- Monitor HOS counters
 - ELD displays 11-hr driving limit, 14-hr on-duty/ driving window, and 70-hrs/60-hrs duty cycle
 - Depot displays 14-hr on-duty/driving window,
 11-hr driving limit, and 70-hrs/60-hrs duty cycle
- Manage HOS violations
- Resolve Issues and Malfunctions
 - Drivers should first contact their motor carrier
 - Carriers should contact EROAD to resolve malfunctions within eight days

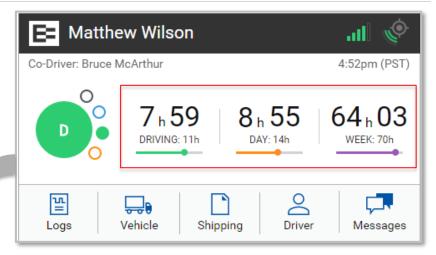

ELD Device

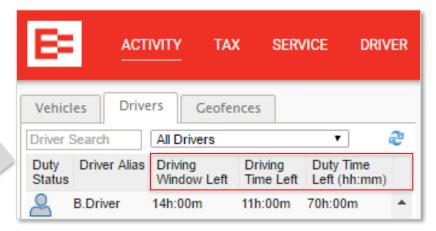

Depot Application

 
Depot – Menu Overview



The following is a brief description of each menu:

- Activity Menu View a list of vehicles and access unit details, activity, messages, and gateway information; view a list of drivers and current details; view a list of geofences
- Tax Menu* View IFTA, Weight Mileage, RUAF Mileage, and IRP information, as applicable to your organization
- Service Menu View vehicle service information including scheduled or competed service, and other service tasks; schedule new service, and export schedules
- Driver Menu* View driver profile and logs, add a driver
- Reports Menu Generate reports for your fleet, drivers, tax, and fuel management


(*Client Administrator functions)



Depot – Menu Overview (continued)



- Action Center Menu* Manage missing Weight Mileage Tax (WMT) configuration, assign unidentified driver trips, manage unassigned Ehubos
- System Messages View system messages
- Administration Menu* Access various settings to manage users, drivers, vehicles and assets, groups, geofences, tags, your organization, and Ehubos; set your default page, manage your profile (notifications and password), go to the mobile site, and logout
- Help Files Search help files, access frequently asked questions (FAQs), view training videos, or contact EROAD

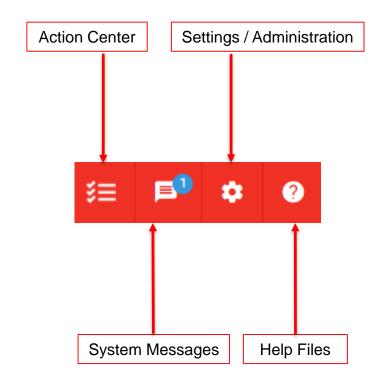

(*Client Administrator functions)

Learning Summary



In this training session, you:

- Viewed how the ELD interfaces with Depot
- Viewed the Depot menu structure

