

Learning Objectives



In this training session, you will:

- Open Manage Features on a vehicle
- Enable Driver Login, ELD, and Inspect features


Depot Setup – Access Vehicles / Assets



Use Manage Features to enable certain features on the in-vehicle device.

Perform the following tasks to access the Administration menu to manage features on a vehicle.

- 1. Click the **Settings** icon.
- 2. Click the **Administration** menu.
- 3. Click the **Vehicles / Assets** submenu.

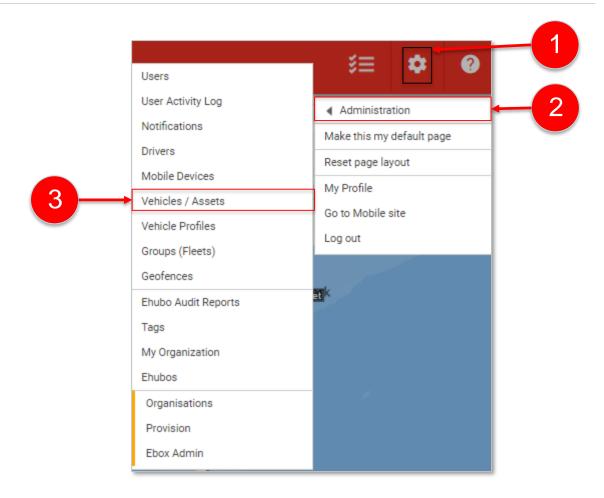

Depot Setup - Manage Features on a Vehicle



The Manage Vehicles / Assets screen appears. Many of the buttons at the top of the screen are disabled (grayed out) until you select one of the vehicles.

- 1. Click the check box beside the vehicle name.
- Click the **Manage Features** button. Manage Vehicles / Assets **Email ELD Logs** Web Services ELD Logs Transfer **Export ELD Logs** 8 day view ▼ All Groups (Fleets) Search All Vehicles ▼ | All products Add New Vehicle or Asset **Export Vehicles** Manage Features Share Selected Vehicle Name (Unit . Plate Make/Mod€ Product IFTA License **ELD Status** Tax Service Shared Inputs Template 34534543 3453453 534534534! -ELD Tractor Truck 4354353 345345 3453453 / Ehubo 2 Premium Ready ELD Tractor Truck 45645654 4564564 45645646 / -ELD Tractor Truck 45654645 456534 465465465 -ELD Tractor Truck 7868768 67566T7FF test / test -ELD Tractor Truck AndrewG21 GEN21B1 EROAD / El Ehubo 2 Premium ELD Weight Mileage ELD Tractor Truck


Depot Setup – Manage Features on a Vehicle (continued)



The Ehubo features dialog box appears.

- 3. Click the checkbox(es) beside the Ehubo features that apply to this vehicle.

 Note: Driver Login, Inspect, and ELD are added in this example.
- 4. Click the **Apply** button.

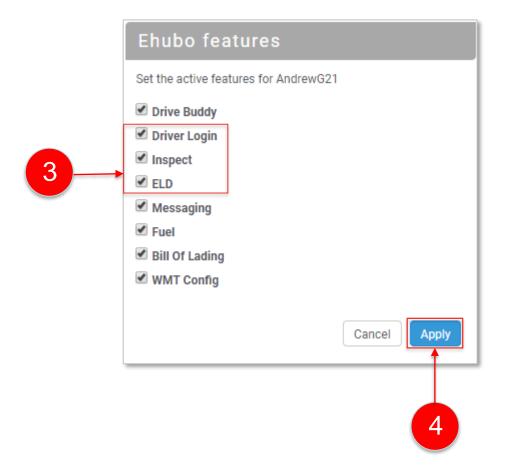

Learning Summary



In this training session, you:

- Opened Managed Features on a vehicle
- Enabled Driver Login, ELD, and Inspect features

