



EROAD



EROAD CoreHub Xtreme Install Guide

Carrier, AUS, NZL

Technical support

USA 1-855-503-7623 support@eroad.com

AUS 1800 437 623 support@eroad.com.au

NZL 0800 437 623 support@eroad.co.nz

Parts & equipment



CoreHub Xtreme (the 'unit')



Trailer & reefer Smart harness



External antenna



Bracket

Zip ties, screws

Required tools

- Socket/ Spanner set
- Side cutters
- Impact driver and hex bits
- 18/20ga butt splice crimping tool
- Propane torch
- Platform to safely reach the top of the reefer

A ladder is fine for heights up to 2 m (7 ft) **but should not be considered safe for reaching the top of a reefer**. Where possible, use a scissor-lift, forklift basket, or similar stable, load-bearing platform.

Pre-prep

1. Start the reefer to ensure it's working with no console alarms.
2. Ensure the reefer has its DataLink/CarrierShot firmware updated and operating.
3. Use the Safety Lockout Procedure - disconnect any AC power source and battery **NEGATIVE**.


Mount the unit

- Attach the unit to a flat surface half-way up the inside of the reefer, such as above the display on the APX.
- Use a drilling template to install the bracket correctly.
- Keep the unit and the cables away from hot or moving parts and high voltage lines (usually colored orange).

Bracket



APX

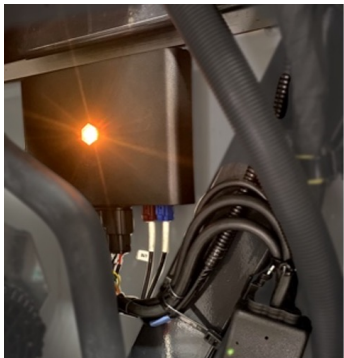

Advance



Vector 6500



Vector 8600




Mount the antenna

- Attach the antenna to the top of the reefer or the side front of the trailer. To function properly, it must directly see the sky.




Plug the unit into the reefer serial port

1. Run the CoreHub Carrier harness cables to the serial port by the display, following the reefer frame or low voltage lines underneath.
2. The harness has connectors for reefer data, fuel sensor, and the switch.
3. Use the double-loop zip ties to space the cables.

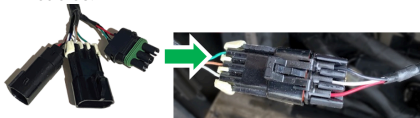

Reefer data to Xtreme harness

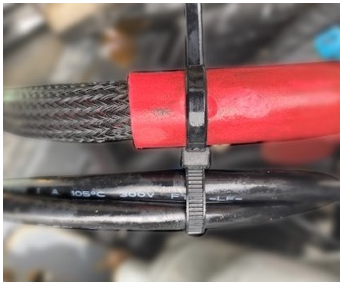

Loop ties

Attach the unit to J1 through the (optional) switch cable, or adapter

1. To install the optional pushbutton switch, use the start/run toggle switch nut and a self-drilling screw. If few switch threads are exposed, pull the switch to start the nut.
2. (A thicker switch nut is included to replace the existing one for easier tightening with a 9/16-inch 12-point flat ring spanner. Older models like the Advance have the pushbutton mounted vertically with a machine screw, sealing washer, and lock.)



3. Run the switch cable to the rear of the display to avoid interference with doors and compartment covers.
4. Tie the double fuse holder near the display for future use.

5. Plug the switch cable (or adapter, if not installing a switch) into both the reefer J1 connector and the reefer harness.
6. Tie the old J1 jumper to the connector for future use.



Switch – Reefer (J1)



**Switch - Xtreme
harness**



Switch - J1

Connect reefer power

1. Connect reefer power and ground at the starter solenoid ring studs.
2. The power cable is usually tied along a battery feed to the solenoid using double-loop zip ties or can follow the low voltage cables under the reefer.
3. The power fuse cover should be tied up with wires coming out the bottom.



Reefer power - Solenoid

- Connect to the **blue** and **brown** power studs as well as the **white** ground stud. Deep 3/8in sockets can help tighten the nuts. Do not over-tighten as the studs can break.



Reefer power - cable follow

Reefer on; look for a solid red light

1. Reconnect the battery.
2. Use the displayed table to troubleshoot the unit's status.



Color	Flash	Desc
Pink	Solid	Bootup
Blue	Solid	Starting Services
Green	Solid /Ignition On	Disconnected from Cloud
Red	Flashing / Ignition Off	Connecting to Cloud
Red	Solid /Ignition Off	Connected to Cloud
Orange	Flashing / Ignition On	Connecting to Cloud
Orange	Solid /Ignition On	Connected to Cloud

Use the Installer app to commission the unit & wireless sensors

1. Scan the QR code to download or search for Unit in Google Play, or Apple's App Store.



2. Log in to the app using your Core360 credentials.
3. Turn on the reefer and verify that the unit's status LED is solid red and that you are within 5 m of it.
4. Select Install from the home screen.
5. Use the Unit QR code to identify the unit to the app.
6. Enter the trailer and reefer information.

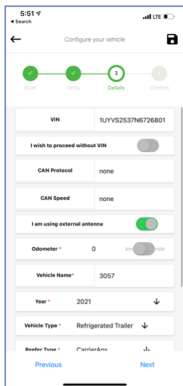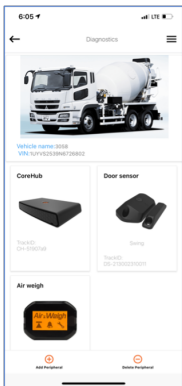

Add sensors one at a time by scanning their QR codes. Each sensor has diagnostics.

Photo verification

Installers are encouraged to photo-document their work to assist in supporting work order documents. Any digital camera may be used for 2 or 3 images per site, but images must:

- Show the device clearly, mounted in place, oriented appropriately.
- Show connections and wiring secure and tidily managed.
- Indicate the environment in which the device is installed (its position in the cab, or on the asset).
- You may also wish to note the vehicle make/model for future reference.



Photos are evidence of a compliant install. They protect EROAD's and the Installer's liability, should a future 3rd party or incident affect compliance integrity.

Health and safety

There are no user-serviceable parts.

This device was designed to track land-based Assets that may be subjected to rain, light impacts and general mud and dust. Installation in or on water-borne equipment is not recommended and is not covered by EROAD's warranty.

This device is factory-sealed; tampering will void the warranty.

Before installing EROAD equipment in a vehicle you must be, in Australia, an approved EROAD installer and, in New Zealand, an accredited EROAD installer. EROAD expects installers and contractors to understand and follow all relevant health and safety regulatory requirements.

The installer must wear appropriate Personal Protective Equipment (PPE) for the install risk and customer requirements. PPE may include safety glasses, safety shoes, work gloves, hard hat, high visibility vest, sun cream, sun hat and coveralls. You must understand and comply with the safety requirements of customers or third parties.

Avoid fitting EROAD equipment in locations that could impede or cause injury to people. This includes potential head strike zones on the windshield or dashboard, airbag deployment locations, seatbelts, and other safety-relevant devices.

The vehicle must be parked and level, with the parking brake engaged.

Before installation, check that other safety-relevant equipment is working properly and report any issues to the customer.

Before installers are permitted to work under or around suspended equipment – held aloft with slings, hoists, or jacks – ensure the equipment is secured to prevent collapse or falls.

Avoid running cables close to heat sources, sharp edges, obstacles or safety-relevant devices.

After installation, check that all other safety-relevant equipment continues to work properly.

While EROAD hardware is comprehensively tested against corrosion and ingress, devices are not invulnerable to water, fire or impact damage. Do not subject EROAD devices to extreme heat, high-pressure water force or other intense physical forces.

Protect this device and other EROAD devices from extreme temperatures. Operating temperatures for the equipment related to this guide are found in the specifications page.

Installers must ensure they fully understand these instructions before installing an EROAD-supported device and immediately seek advice from a Regional Installation Manager on any matter that is not understood.

Legal

The legislation and rules concerning the installation and operation of GPS driver aids vary. You are required to be familiar with the applicable laws of the jurisdiction(s) in which the vehicle will be operated. This includes the rules governing installation of GPS driver aids, distracted driving legislation and other road rules.

It is your and your vehicle driver's sole responsibility to install and use the device in a manner that complies with the law and will not cause accidents, personal injury or property damage. To the fullest extent permitted by law, EROAD disclaims all liability and excludes all warranties for installation or use of this device in a way that may violate such laws and regulations.

As EROAD is continuously improving its products, EROAD may make changes to this device at any time, which may not be reflected in this document. Please contact your nearest EROAD office if you require any further assistance.

If you think that the installation of this device may have caused your vehicle's performance to be impeded, please contact EROAD Technical Support immediately to resolve the issue. EROAD is not liable for any costs or expenses incurred by engaging a third party to repair the fault without EROAD's prior consent.

Addendum

Migrating from a TMU to Xtreme

1. **Unplug the TMU unit from all cabling.**
2. **Take photos of the installation beyond this step.** Record/confirm the serial number of the TMU before moving on.
3. **Except for the fuel sensor and its cabling,** remove the antenna and any connected TMU-related hardware (harnesses, door sensors, etc).
4. If installed, **remove the old TMU switch attached to the controller unit carefully.**
 - a. This controller houses delicate components, and some plastics become brittle with age. Avoid forcing or prying the TMU switch from the controller.
 - b. Once removed, **fill holes with appropriate grommets, and weatherproof with silicone.**

Mount the Xtreme


Follow the steps detailed in this guide, with the following call-outs:

1. If using the same TMU locations for the Xtreme and its antenna, (re-use holes, braces/supports, changes in reefer layout/appropriateness, gotchas)
2. For some customers, a new wireless door sensor will need to be installed.

Specifications

Cellular	4G LTE
WiFi	2.4 & 5 GHz 802.11 a/b/g/n, 150 Mbps
Bluetooth	Classic+BLE 4.2
GPS	GPS, BEIDOU, GLONASS, Galileo
Power	12 V, 0.5 A 24 V, 0.25 A
Int. Battery	Lion rechargeable, or Li-hybrid Supercap (Optional)
Dimensions	160 x 90 x 25 mm (6.3 x 3.5 x 1 in) 250–400 g (0.5–0.8 lb)
Temperature	-40 – +70°C
IP Rating	IP66K

Pinout

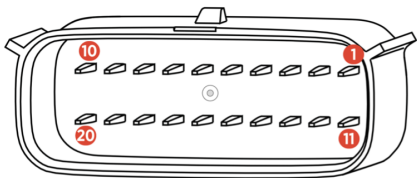

#	Function	#	Function
1	RX2 (normally debug)	11	ADIO 5
2	TX2 (normally debug)	12	ADIO 4
3	RX1 (shared J1708)	13	ADIO 3
4	TX1 (shared J1708)	14	ADIO 2
5	CAN LOW	15	ADIO 1
6	CAN HIGH	16	GND
7	1708-/ CAN1 LOW	17	1-Wire
8	1708+/ CAN1 HIGH	18	EXT 5/ 5 V SW
9	-VIN/ Solar Panel -	19	EX 12/ 12 V SW
10	+VIN	20	Solar Panel +